


- 1. Power on/off
- 2. Volume-
- 3. Volume+
- 4. Brightness-
- 5. Brightness+
- 6. Color-
- 7. Color+
- 8. Contrast-
- 9. Contrast+
- 10. Video Input 1
- 11. Video Input 2

Accessories

- (1) Connecting Cable x1
- (2) Headrest Housing Plus Release Key x1
- (3) Operation Manual x1
- (4) Stand Bracket x1
- (5) Remote Control x1
- (6) AV Cable x1

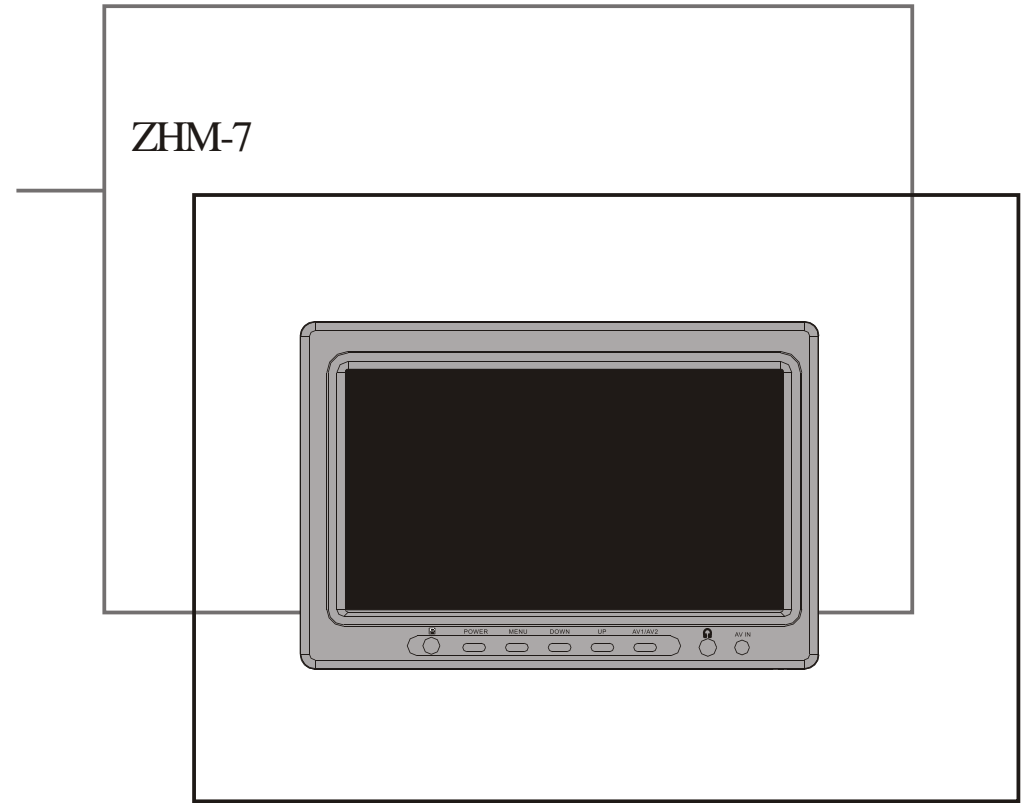

COLOR TFT LCD 7.0" Monitor

Warning


CAUTION

1. The driver must not be able to view operational monitor while driving the vehicle . This is illegal in most states. CHECK with your local law enforcement officials for details .
2. Always check polarity when connecting wire to avoid damage to the unit and /or vehicle.
3. Do not open the housing of the monitor , Servicing must be done at our factory by authorized technicians to maintain the warranty.


Specifications

System	NTSC/PAL Auto Switch
Power Input/Consumption	DC(10~16V)±10% , <700mA
Video Input	Composite Video Signal 1Vp-p 75Ohm
Audio Input	0.5W 8 Ohm at 300mv input
Operating Temperature	-5℃~+50℃
Storage Temperature	-20℃~+60℃
Screen Size(Diagonal)	7.0”
Display Method	TFT Active Matrix System
Resolution(Dot)	1440(H)x234(V)=336,960Dots
Back Light	Cold Cathode Filament Tube
Viewing Area	163(W)x123(H)mm
Viewing Angle	Left ,Right:60° , Top:60° ,Down:45°
Monitor Overall Dimension	183(W)x123(H)x30(D)mm
Monitor Weight	<1kg
The Specifications are subject to change without prior notice	

Function

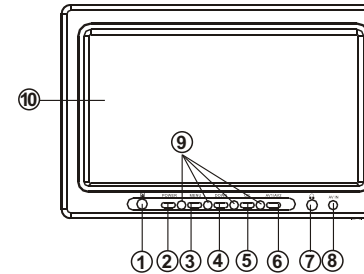

- (1) Control Sensor Pick Up
- (2) Power
- (3) Menu
- (4) Adjust Down
- (5) Adjust Up
- (6) AV1/AV2 Switch
- (7) Headphone Connection
- (8) AV in
- (9) Infra-red audio transmitter:
2.3MHz/2.8MHz & 3.2MHz/3.8MHz
- (10) LCD screen

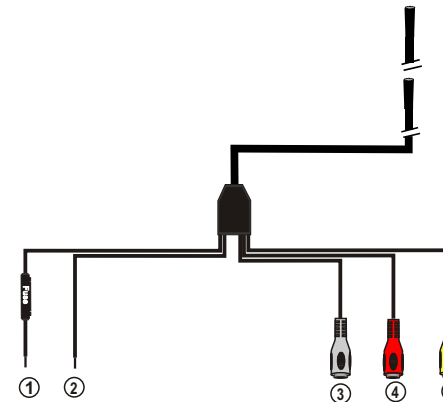


- (1) +12 Volt Accessory (RED)
- (2) (-) Negative Ground (BLACK)
- (3) (RCA) Audio Input L (WHITE)
- (4) (RCA) Audio Input R (RED)
- (5) Video In (YELLOW)

Instruction of the installation of the headrest monitor



1. Install the unit in the headrest pillow with the cable coming from the posts

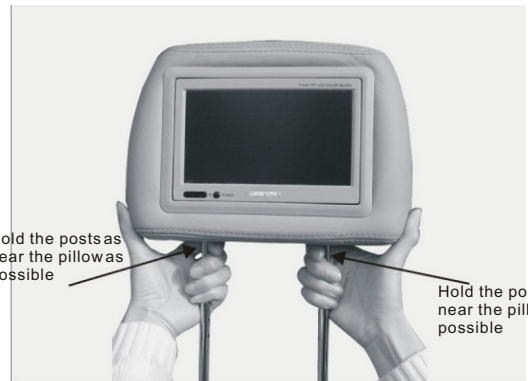

Hold the posts as near the pillow as possible

Hold the posts as near the pillow as possible

2. Hold the posts as shown in the picture



Pull the posts outwards horizontally


Pull the posts outwards horizontally

Press inwards

3. Pull the posts outwards horizontally



4. Pull the posts until the desired distance (130mm-160mm)

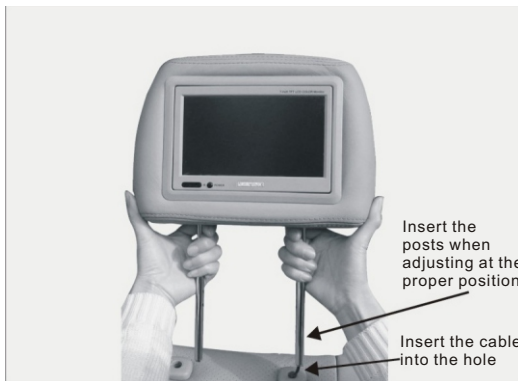

Insert the posts when adjusting at the proper position

Insert the cable into the hole

5. Insert the cable coming from the posts in the holes of the seat first and then insert the posts in the holes of the seat



6. Finish the installation and connect the necessary cables