 


ZT-512 / ZT-524

WEATHERPROOF AM/FM RADIO

USERS MANUAL

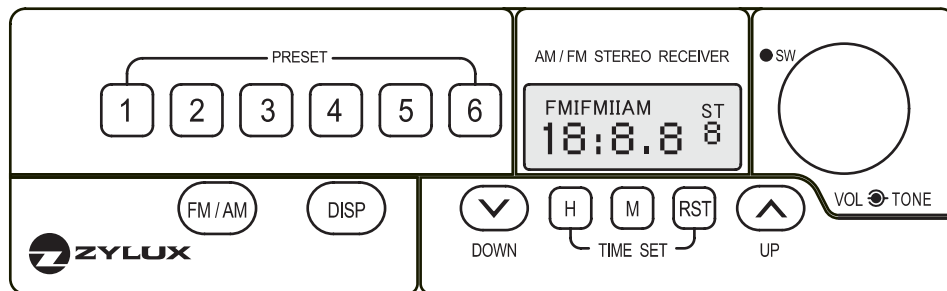

www.zylux.com.au

SPECIFICATIONS:

Frequency Range:

E SYS	J SYS	N.A SYS	S.A SYS
FM: 87.5-108	76-90	87.5-108	87.7-107.9
AM: 522-1620	522-1629	530-1620	530-1710

Sensitivity(S/N=26dB)

FM :< 20dB ; AM :< 30dB

SNR:FM :> 46dB ; AM :< 40dB

Distortion: < 7%

6AM and 12 FM station memory

Maximum Power Output : > 2x5W


Impedance: 2x4 ohm

Power supply voltage: Model No. : ZT-512: DC 12V
Model No. : ZT-524: DC 21~30V


Dimensions: 180mmx50mmx100mm

WIRE CONFIGURATION

POWER PIN

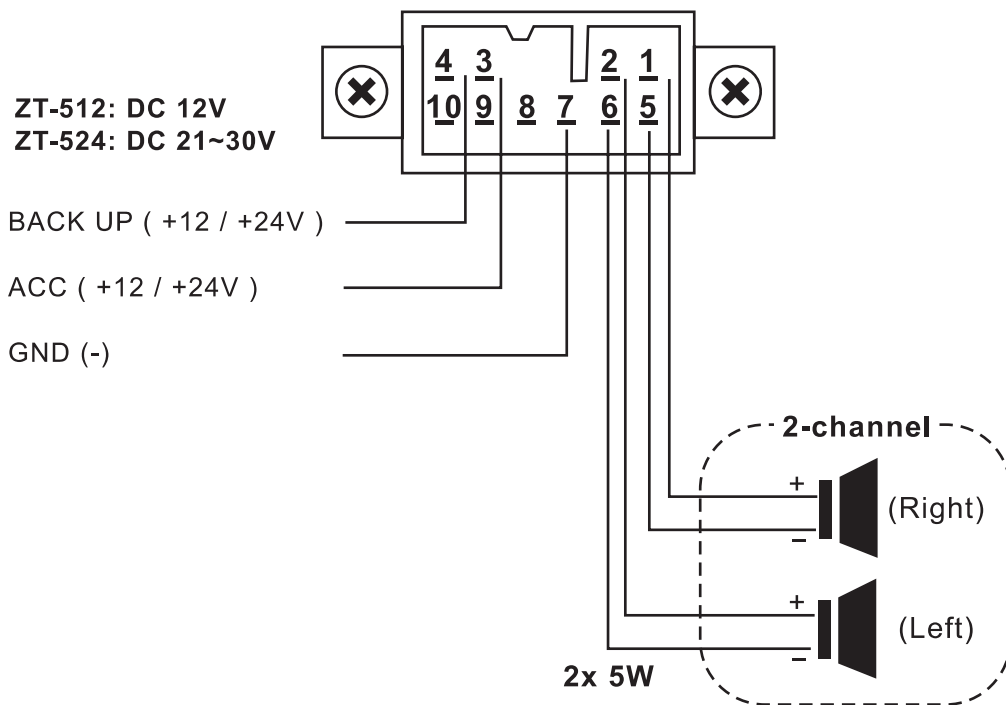

POWER-ON ; VOLUME ADJUSTMENT ; POWER-OFF

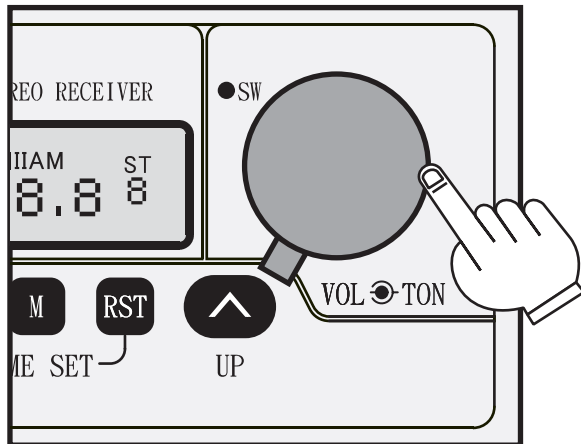

POWER-ON

Turn knob clockwise until you hear a "CLICK" sound to power-on the unit. Time display should come on after 5 seconds.


VOLUME ADJUSTMENT

After unit is powered-on, turn knob clockwise to increase volume, turn knob counter-clockwise to decrease volume.

POWER-OFF

Turn knob counter-clockwise until you hear a "CLICK" sound to power-off the unit.

TONE ADJUSTMENT

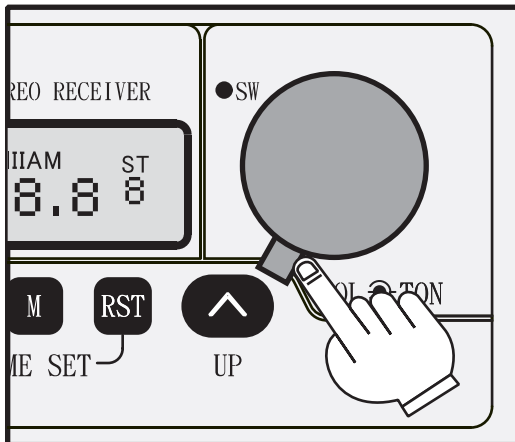

TONE ADJUSTMENT


Turn the dial indicated in left picture to adjust TREBLE value. Turn the dial clockwise to increase TREBLE. Turn the dial counter-clockwise to decrease TREBLE.

RADIO BAND SELECTION



RADIO BAND SELECTION

Press (AM/FM) to select desired radio band.

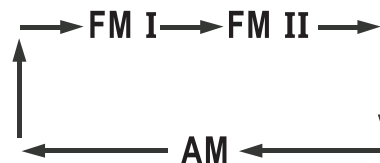

USE OF RADIO


MEMORY STATION

Manually tune to your desired stations :
Press and hold PRESET station buttons for 2 seconds.

A BEEP sound will signal preset memory completion.

FM : 12 Memory Stations
(6 Stations per Band)

AM : 6 Stations

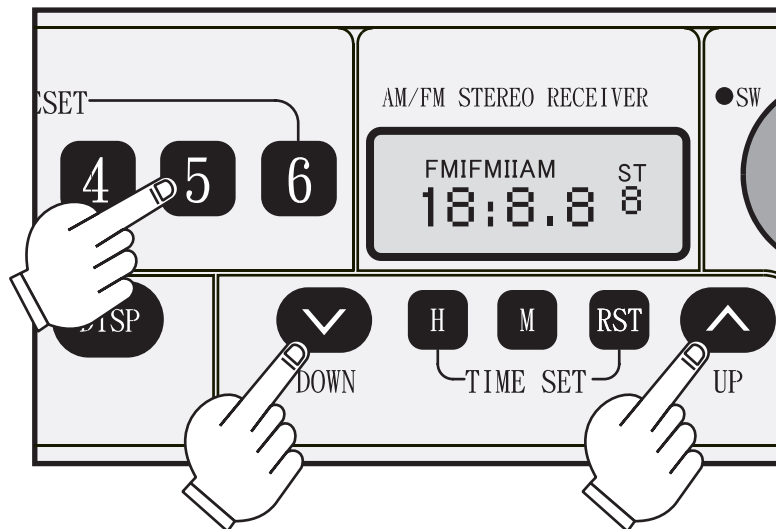

AUTO STATION SEARCH

 
Press and hold (UP) or (DOWN) button for 1 second for station auto-search. Stations can be stored in 1. 2. 3. 4. 5. 6. memory locations.

MANUAL STATION SEARCH

Press (UP) or (DOWN) button repeatedly for manual station search.

STATION DISPLAY

Press and hold (DISP) button to display current station playing. Mode will return to time displaying after 5 seconds.

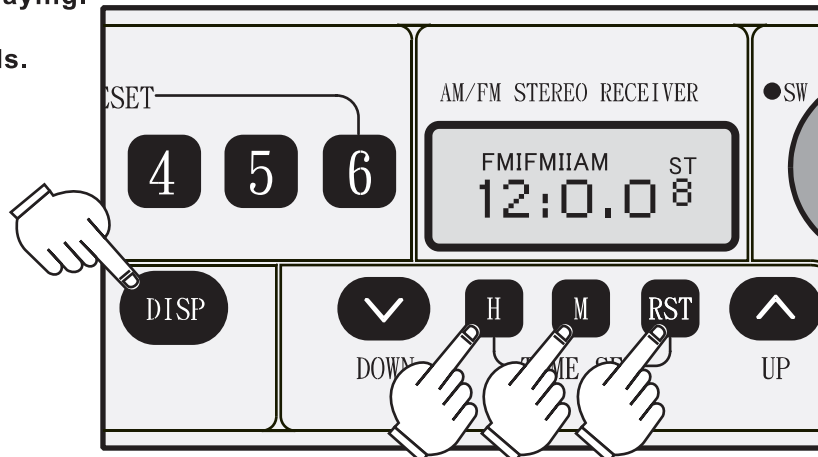

CLOCK ADJUSTMENT

Press (RST) for 1 second to adjust time. Press (H) to adjust hour. Press (M) to adjust minute. Press (RST) to complete time adjustment.